

Installation Instructions

Product Code: NW 4310


One Stage, Point of Use, Dual Acting Water Filtration System

This water filtration system will remove chlorine, odours, bad tastes, sediment and provides great tasting water.

The system can be easily installed beneath the kitchen sink.

Replace filter every 6000 litres or 6 months.

Installation Schematic

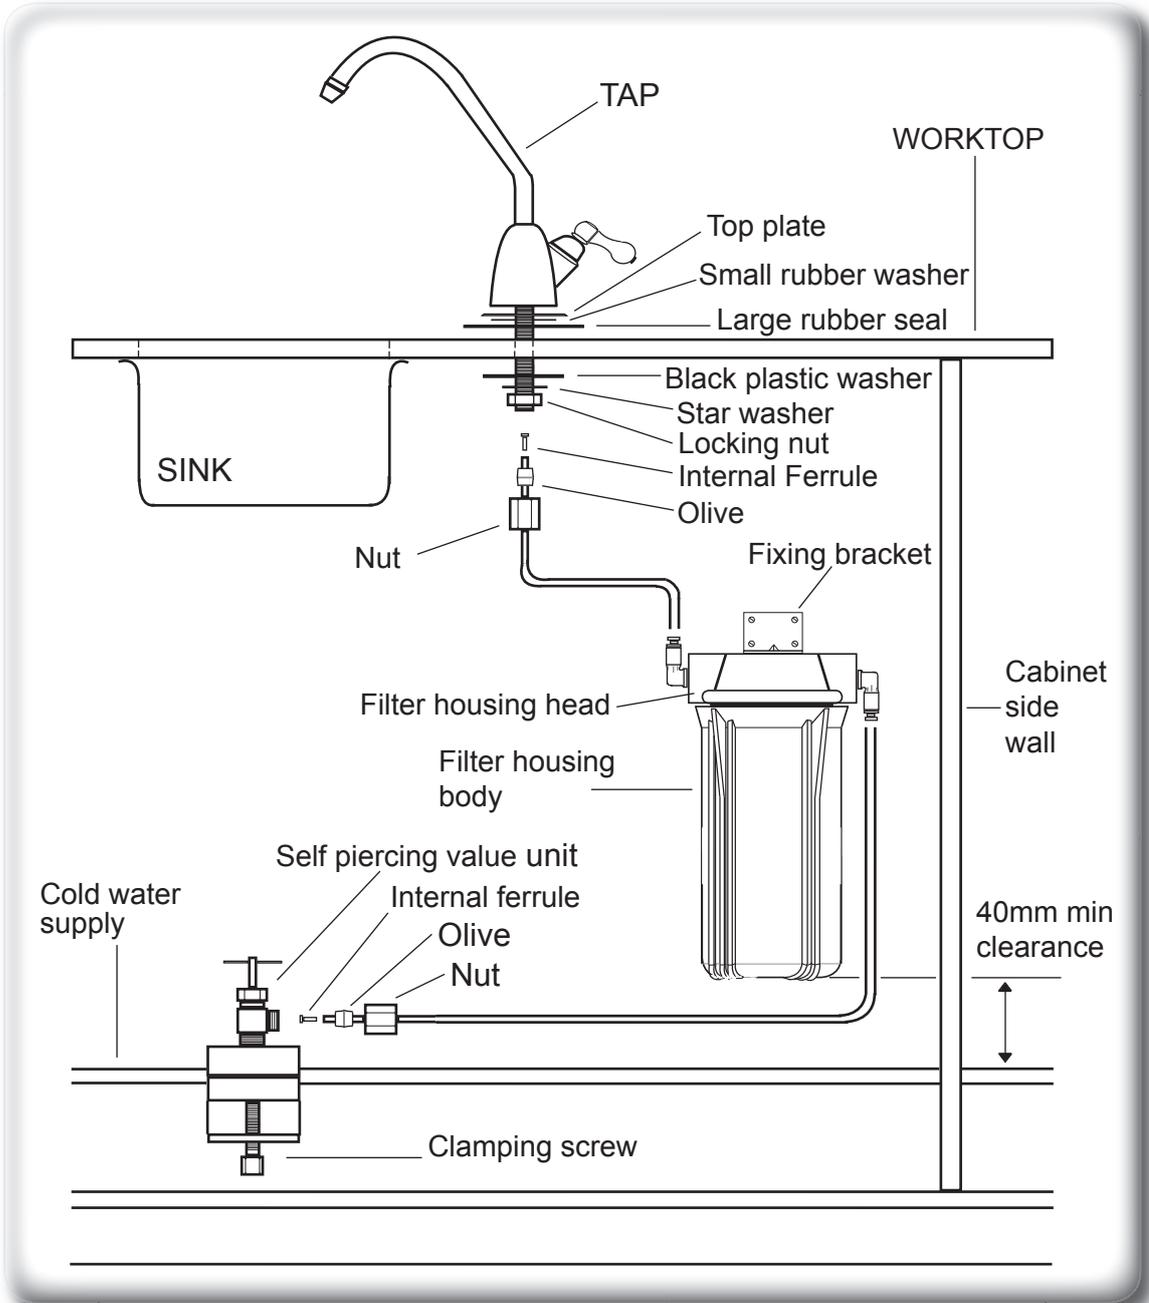

Parts List

- 1 x Swan Neck with ceramic ¼ turn valve
 - 1 x 10" Filter Housing
 - 1 x Dual Action Sediment/Chlorine Filter. Product Code NW 2915 (single sealing ring on blue top)
 - 1 x Quick fit self cutting valve
 - 1 x Wall mounting bracket with screws
 - 1 x key / wrench
 - 2 metres ¼" plastic connecting tube
- Installation Instructions

Installation Instructions

single stage, point of use, dual acting water filtration system

Select a suitable place to mount your system.

Ensure that there is at least 40mm clear space between filter housing body and any fixture below to allow filter changing.

Using screws supplied fix the housing head to bracket.

Then mount the bracket into position.

Important


Remove the outer wrapping from the filter taking care not to lose the fitted sealing ring.

Check that the large "o" ring is seated evenly in the top of the filter housing.

Place filter into housing and screw onto filter housing head. (See **Filter Replacement** for filter orientation)

Turn the water off.

Replace filter
this way up

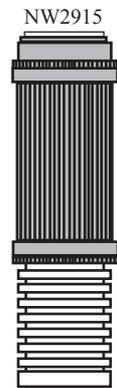

Tap Unit Fitting

Select a suitable place to mount your swan neck tap either through the top of the sink or mounted onto a work surface, ensuring that the tap can discharge fully into your sink without flooding any work surfaces.

Then drill a 1/2" hole and mount the tap using the fittings supplied, make sure the tap is secure & rigid.

Connect the 1/4" pipe using the internal ferrule, olive & nut supplied to the tap and tighten.

Connect the other end of the loose pipe to the port on the filter housing marked "OUT".


Connect the pipe to the self-cutting valve using the internal ferrule, olive & nut supplied.

Ensure the piercing pin is fully retracted in the Quick Fit Self Piercing Valve.

Clamp the valve to the 15mm cold mains and run the 1/4" plastic pipe to the port on the filter housing marked "IN".

Pierce the pipe by turning the 'T' bar fully in, and then fully out.

Retract pin before
fitting to pipe

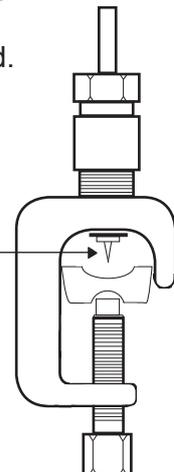

CAUTION:

The water supply to your system must be the cold mains, as hot water will severely damage your system.

Turn the water on at the mains and open the swan neck tap.

All of the air is expelled and the water will begin to flow.

You should allow the water to flow for approximately 10 minutes to remove any debris in the system.

WARNING:

When assembling these units if any leaks occur turn water off.

Tighten any seeping joints and then turn water back on.

Mains water pressure can vary, therefore it is essential to check for leaks daily during first week and periodically there after.

Filter Replacement

Filters should be replaced every 6000 litres or 6 months.

To replace filter, turn off water at mains and self-piercing valve.

Open Swan Neck Tap to release water pressure.

Carefully release housings with ring spanner supplied.

Replace filter and ensure large "O" ring in top of housing is seated evenly before re assembling the housing to the unit. Finally tighten with ring spanner.

If for any reason you experience a problem with this system.

Please call **NOGA WATERCARE TECHNICAL HELP LINE.**

On 0208 400 2020 Mon-Fri 9-5pm

